



Scoot Boot Sizing Guide

Hoof Length (mm)	Hoof Width (mm)	Scoot Size	Hoof Length (inches)	Hoof Width (inches)
95	95 - 110	000 Regular	3 ³ / ₄	3 ³ / ₄ - 4 ⁵ / ₁₆
100	100 - 115	00 Regular	3 ¹⁵ / ₁₆	3 ¹⁵ / ₁₆ - 4 ¹ / ₂
105	95 - 110	0 Slim	4 ¹ / ₈	3 ³ / ₄ - 4 ⁵ / ₁₆
105	105 - 120	0 Regular	4 ¹ / ₈	4 ¹ / ₈ - 4 ³ / ₄
110	100 - 115	1 Slim	4 ⁵ / ₁₆	3 ¹⁵ / ₁₆ - 4 ¹ / ₂
110	110 - 125	1 Regular	4 ⁵ / ₁₆	4 ⁵ / ₁₆ - 4 ¹⁵ / ₁₆
115	105 - 120	2 Slim	4 ¹ / ₂	4 ¹ / ₈ - 4 ³ / ₄
115	115 - 130	2 Regular	4 ¹ / ₂	4 ¹ / ₂ - 5 ¹ / ₈
120	110 - 125	3 Slim	4 ³ / ₄	4 ⁵ / ₁₆ - 4 ¹⁵ / ₁₆
120	120 - 135	3 Regular	4 ³ / ₄	4 ³ / ₄ - 5 ⁵ / ₁₆
125	115 - 130	4 Slim	4 ¹⁵ / ₁₆	4 ¹ / ₂ - 5 ¹ / ₈
125	125 - 140	4 Regular	4 ¹⁵ / ₁₆	4 ¹⁵ / ₁₆ - 5 ¹ / ₂
130	120 - 135	5 Slim	5 ¹ / ₈	4 ³ / ₄ - 5 ⁵ / ₁₆
130	130 - 145	5 Regular	5 ¹ / ₈	5 ¹ / ₈ - 5 ¹¹ / ₁₆
135	125 - 140	6 Slim	5 ⁵ / ₁₆	4 ¹⁵ / ₁₆ - 5 ¹ / ₂
135	135 - 150	6 Regular	5 ⁵ / ₁₆	5 ⁵ / ₁₆ - 5 ⁷ / ₈
140	130 - 145	7 Slim	5 ¹ / ₂	5 ¹ / ₈ - 5 ¹¹ / ₁₆
140	135 - 155	7 Regular	5 ¹ / ₂	5 ⁵ / ₁₆ - 6 ¹ / ₈
145	140 - 160	8 Regular	5 ¹¹ / ₁₆	5 ¹ / ₂ - 6 ⁵ / ₁₆
150	145 - 165	9 Regular	5 ⁷ / ₈	5 ¹¹ / ₁₆ - 6 ¹ / ₂
155	150 - 170	10 Regular	6 ¹ / ₈	5 ⁷ / ₈ - 6 ¹¹ / ₁₆
160	155 - 175	11 Regular	6 ⁵ / ₁₆	6 ¹ / ₈ - 6 ⁷ / ₈

Please contact your closest stockist for our smaller size range - M0, M00, M1, M2 and M3. These measurements are a guide only. They do not represent the inside dimensions of the Scoot Boot.

Please note: An experienced sizing specialist must be referred to when using this chart to determine your Scoot Boot size. Hoof shape and heel bulb structure is also evaluated and affects finding the correct size. Refer to a Scoot Boot stockist near you or contact our sizing team at sizing@scootboots.com